




# Kodak EasyShare C713 Lens Replacement

Written By: Taggart Ashby

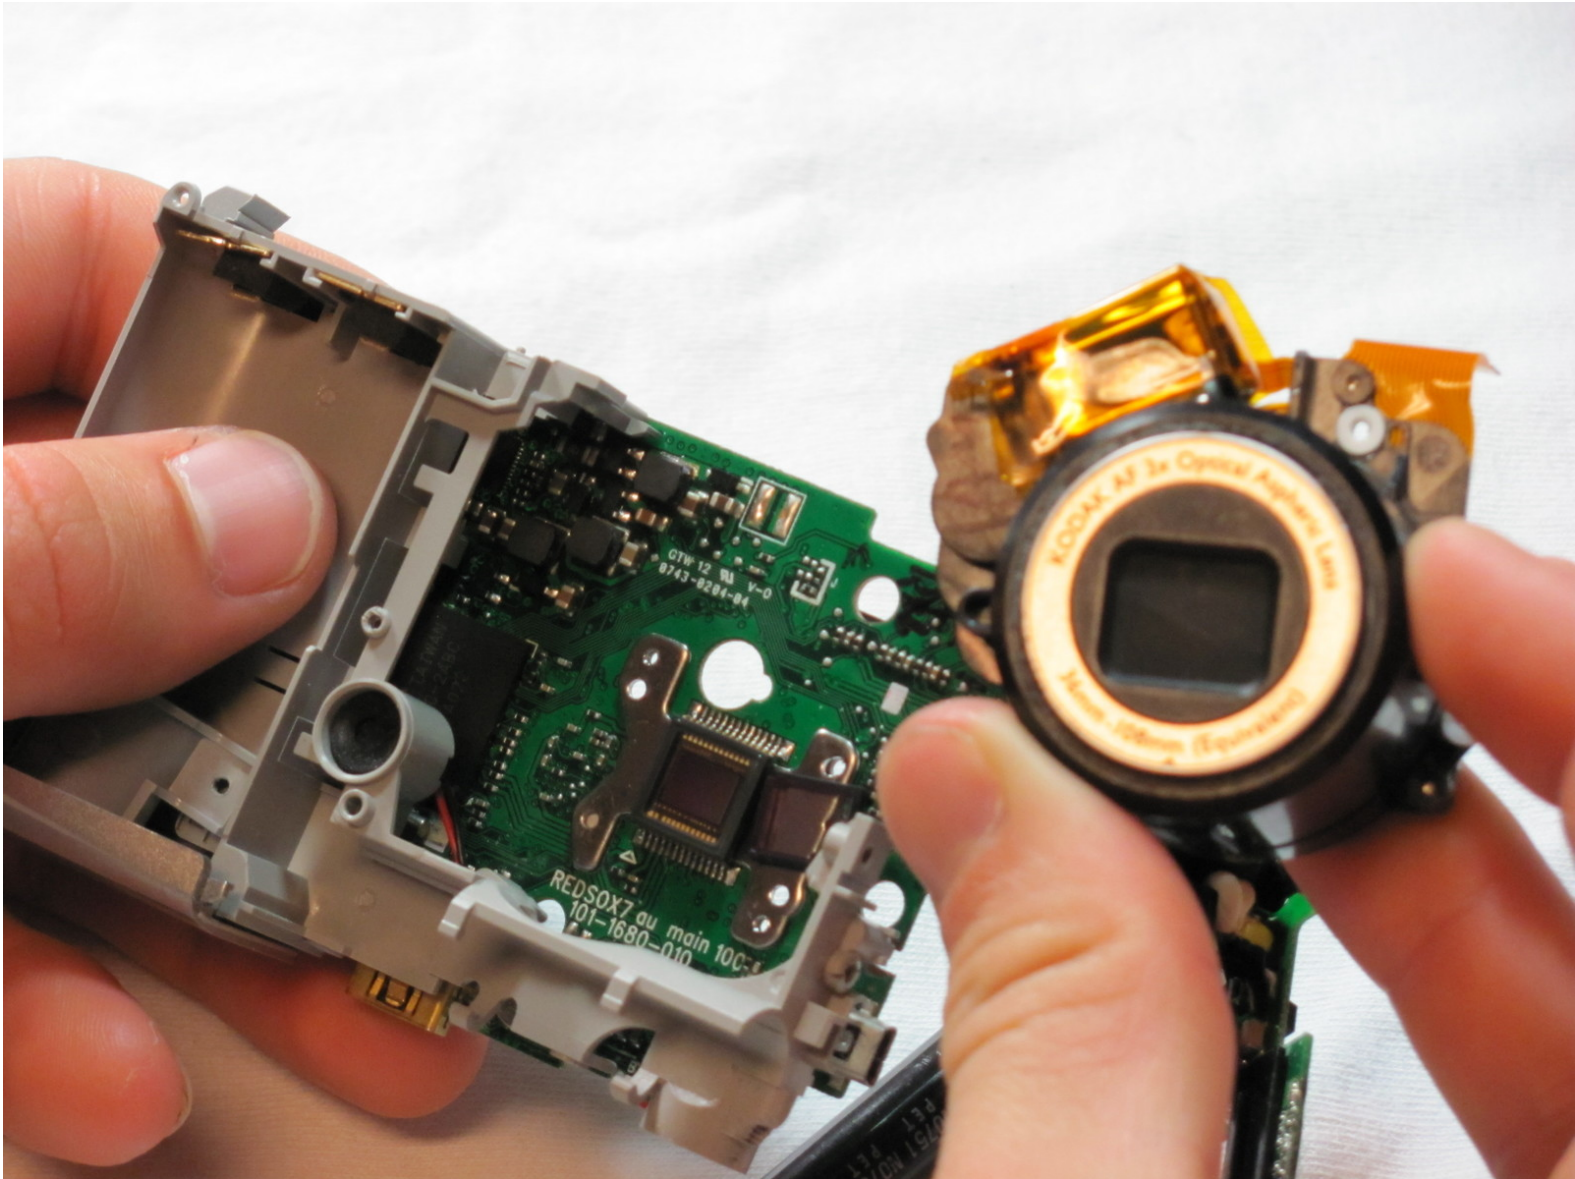

## INTRODUCTION

Removing and replacing the lens.

---



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [Soldering Station](#) (1)
-

## Step 1 — Batteries



- Use your finger tip to slide battery cover door away from the center of the camera.
- The battery door should spring open.
  - If this does not happen, gently open the door lifting from the outer bottom side of the camera.

## Step 2



- Remove the old batteries.






## Step 3 — Outer Case



- Remove 7 screws from the outer case with a Phillips #00.
- All screws are 4.45mm.
- There are 2 screws on the port side.
- There are 2 screws on starboard side.
- There are 3 screws on the bottom.


## Step 4

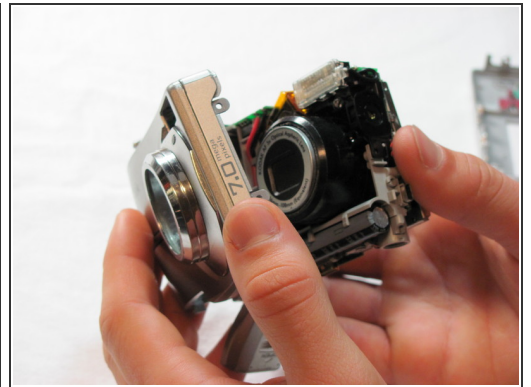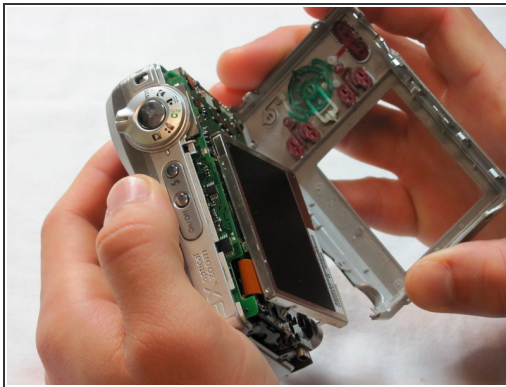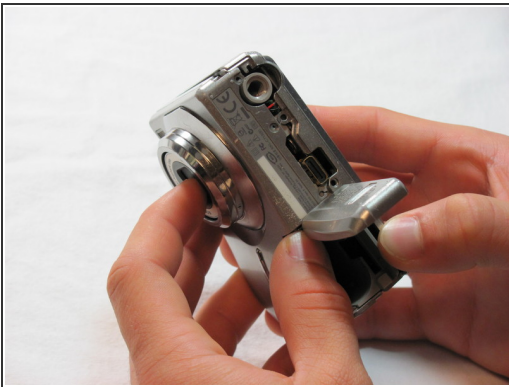

⚠ Make sure the battery cap is "up".

- Pull the outer case off with your hands.


## Step 5 — LCD

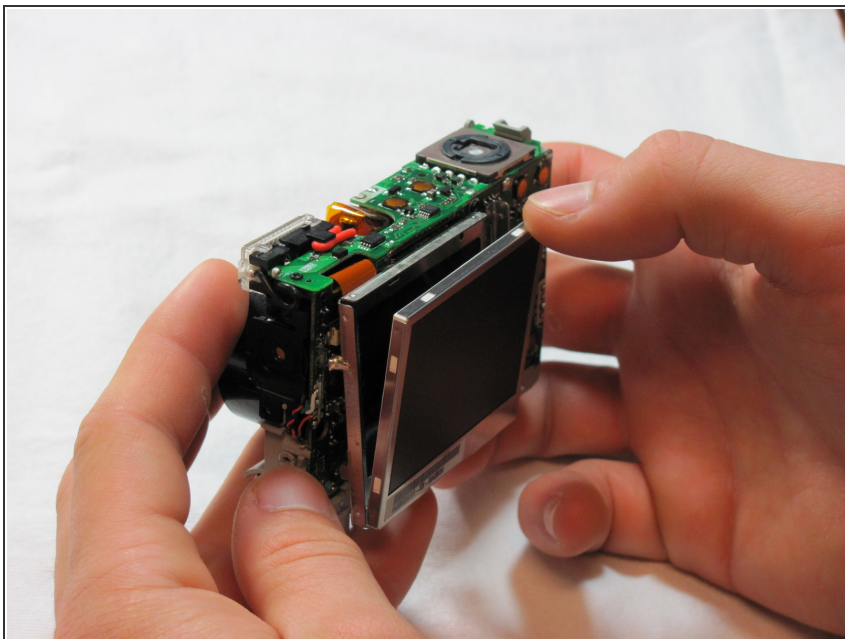

**i** The LCD Screen is hinged at the bottom.

- Put your thumb in the upper right corner of the LCD Screen.
- Pull the LCD screen out of it's outer case with your thumb.



## Step 6

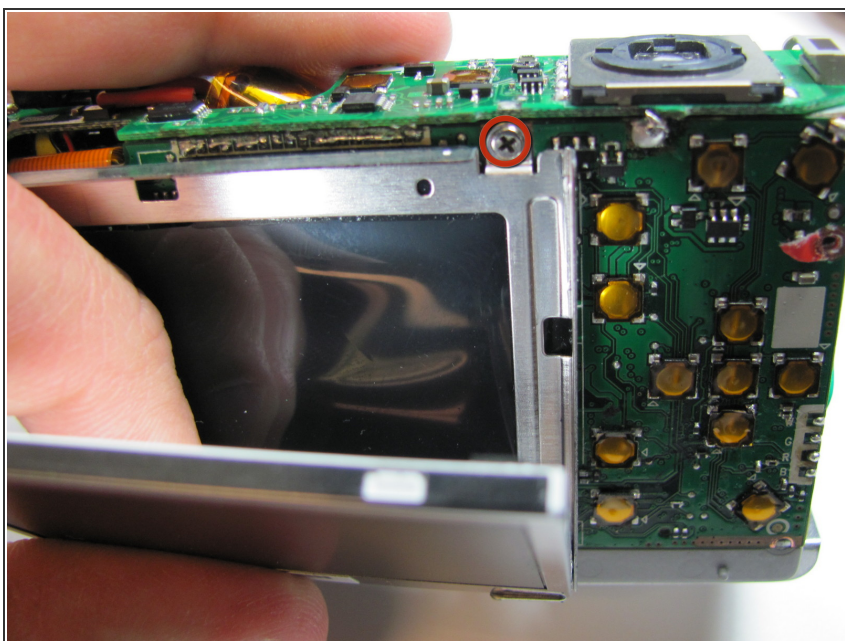

- Remove the screw underneath LCD screen with the Phillips #00. The screw measures 4.1mm in length.




## Step 7

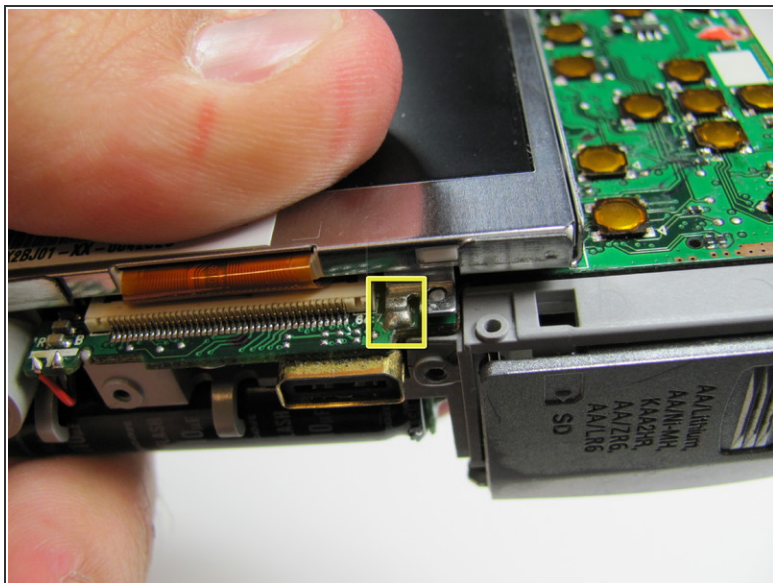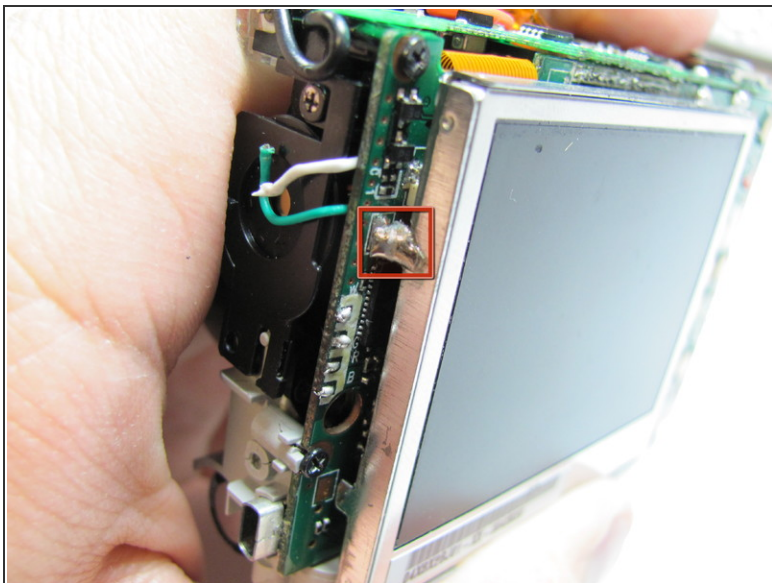

- Desolder the two points.
  - One on the port side.
  - One on the bottom.

## Step 8

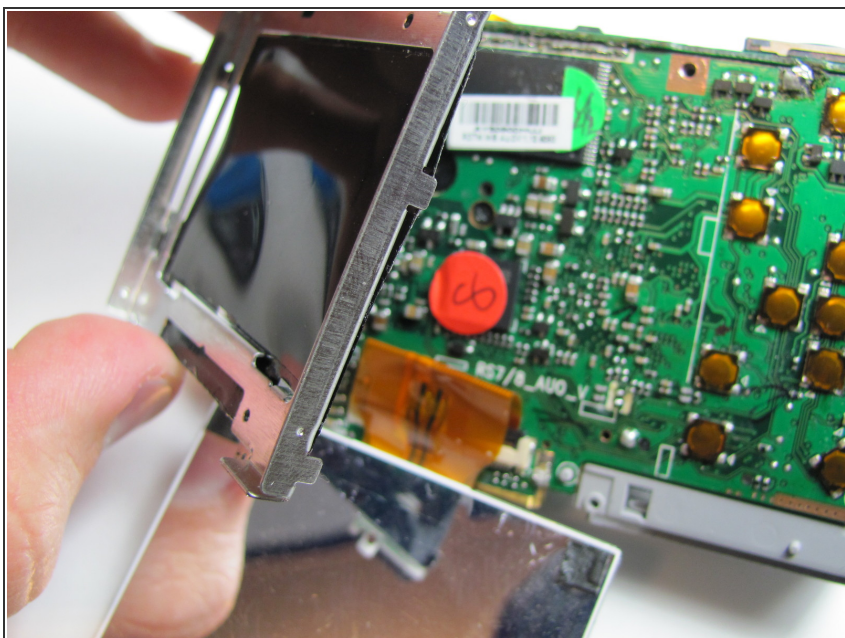


- After desoldering the LCD casing, just use your fingers to carefully remove it.

## Step 9



- Flip up the black tab on the bottom of the LCD Screen with a fingertip.


## Step 10

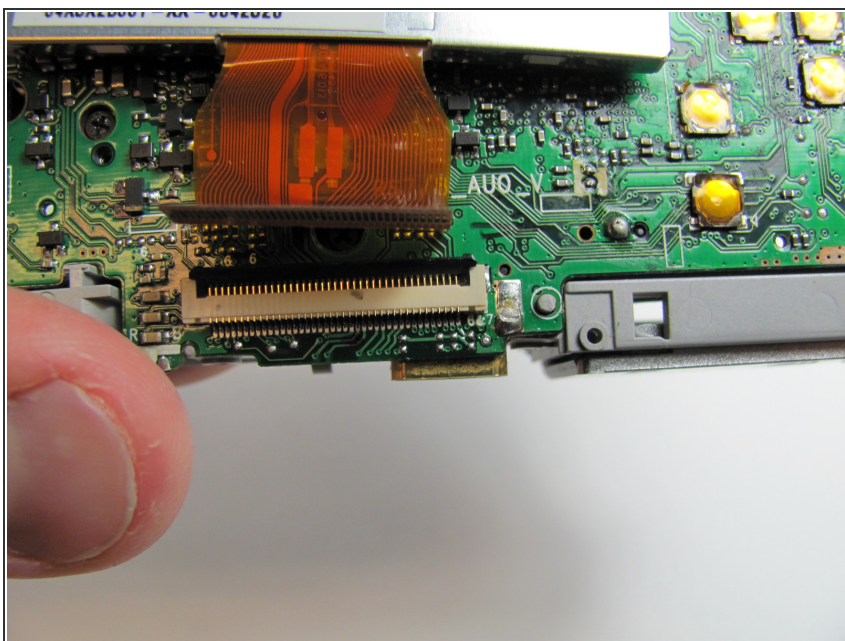

- Remove the LCD ribbon cable from inside the black tab.




## Step 11 — Lens

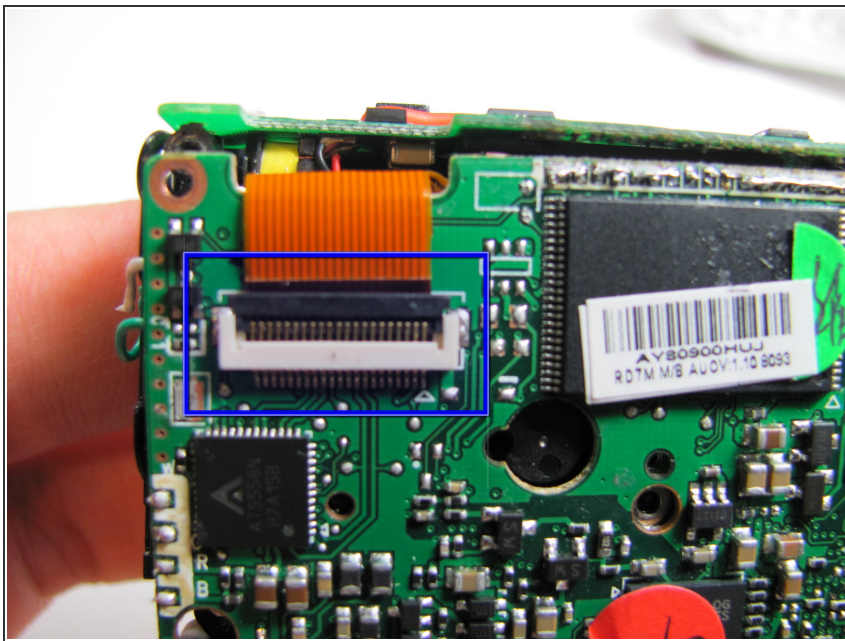

- Using a fingertip, flip the black tab near the top of the camera.
- Remove the ribbon connector from inside the black tab.


## Step 12

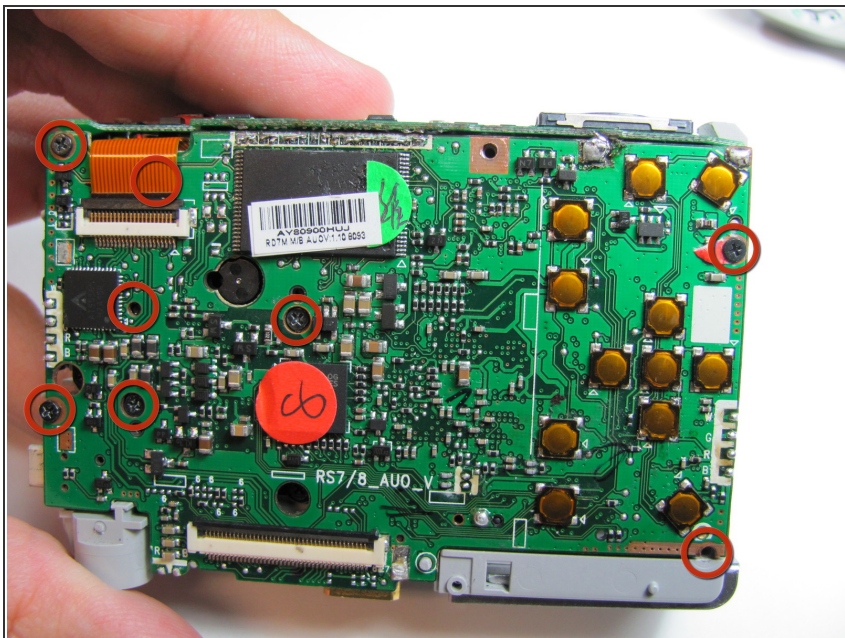

- Remove the remaining screws on the back with the Phillips #00.
- These 8 screws measure 4.1mm in length.




## Step 13

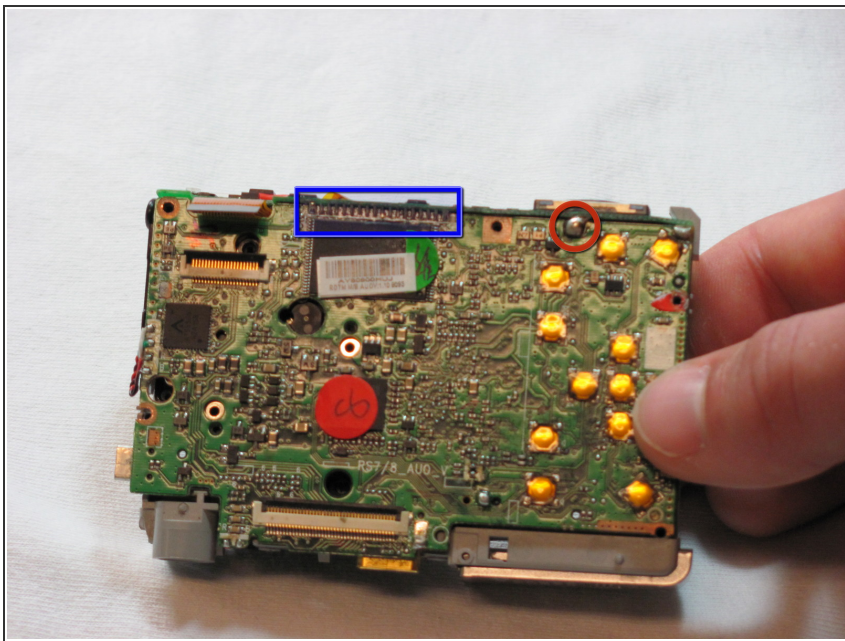



- Desolder the upper points.
- There is a large solder point in the upper right.
- There is a series of solder points in a rectangular area in the upper middle of the camera.

## Step 14

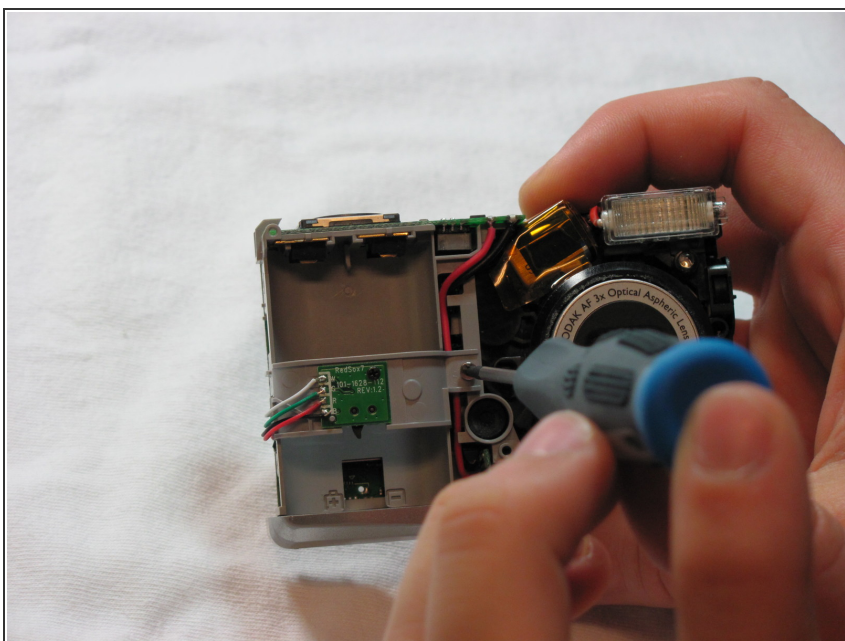




- Turn the camera over.
- Remove the battery cap screw.
  - ⓘ It is silver and measures 2.2mm.

## Step 15

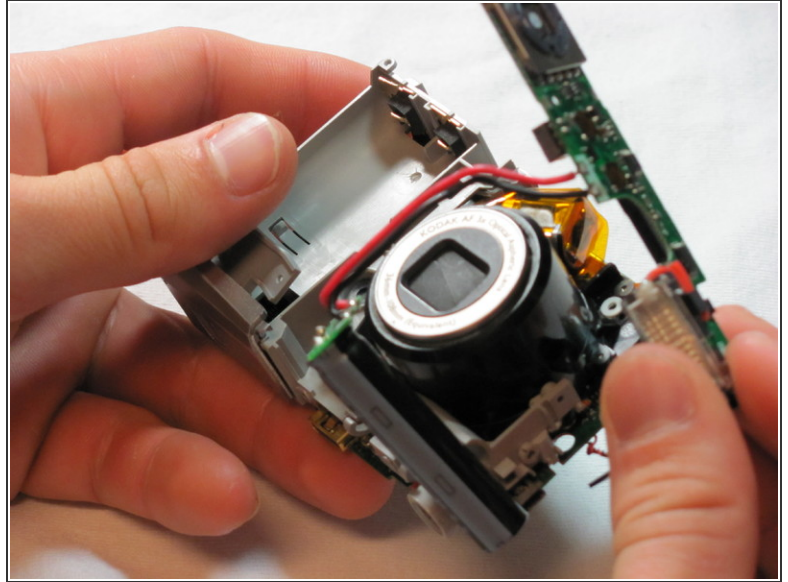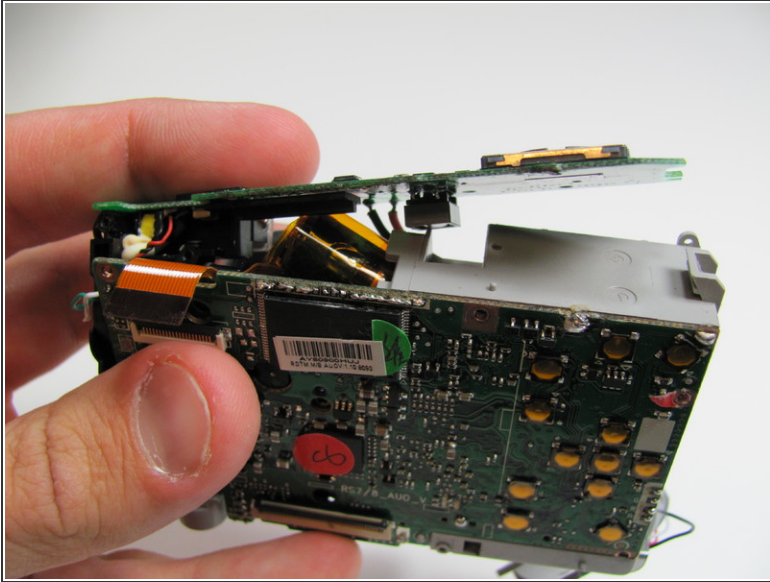

- Turn the camera over.
- Pry the capacitor out of its holder on the bottom of the camera. This can be done with your fingers.

## Step 16

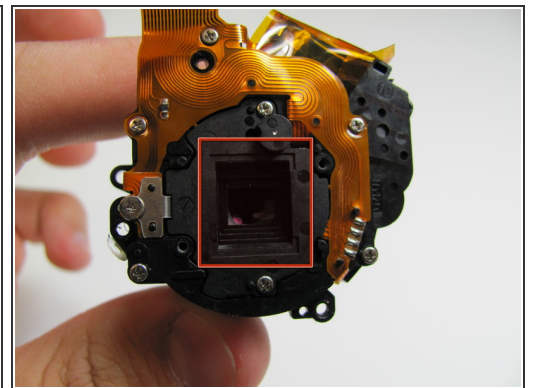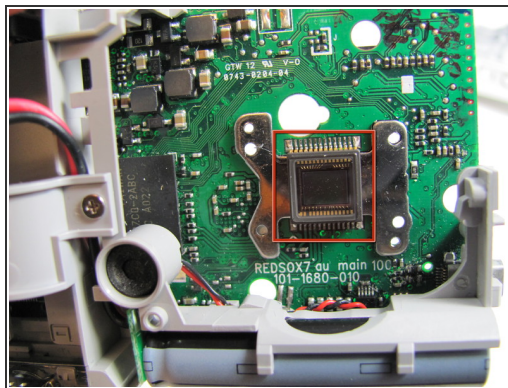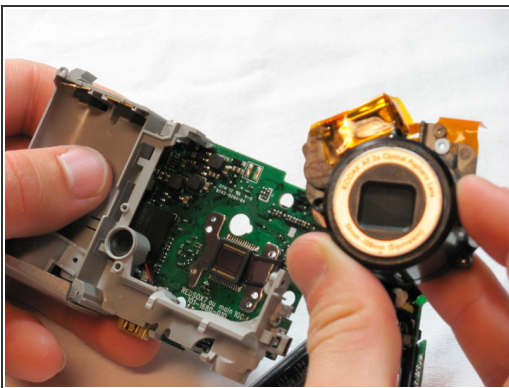

- Remove the lens assembly with your fingers.
  - You may need to wiggle it back and forth until it comes loose.
- Do not touch the marked areas. This will cause the camera to take blurry pictures.

To reassemble your device, follow these instructions in reverse order.

